

USB kabel s konektorem miniUSB 5pinB

Katalogové číslo: 11.99.8718

Katalogové číslo: 11.02.8718

Použitelné pro zařízení:

Sony Part : VMC-14UMB, 182393111

Aiptek: ZCB-PKX

Canon Part : IFC-300PCU, IFC-400PCU, 906A001

Concord: 511821

Fuji: FZ05365-100

JVC: QAM0324-001, QAM0538-001, QAM0719-001

Konica: USB-810

Motorola: SKN6371C

Nikon: UC-E4, UC-E5

Nokia: DKE-2

Olympus Part:- OEM kabel CBUSB4, CB-USB4

Panasonic: VFA0453, VFA0454, K2KZ4CB00010, K1HA09BD0001, K1HA05CD0014, K1HA05CD0005

Pentax: I-USB6

Samsung: AD39-00073A, AD39-00073D, AD39-00073AG, AD39-00132A, AH39-00498AG, AH39-00589AG

HP Part :- 8121-0637 nebo Ferrite Unit 8121-0721

Vivitar: 60313

Kodak: U-5A

Acer	CL-5300
Agfa	Easy Pix SX
Aiptek	A-HD, DAM-Z5X, DUO-V39, DZO-V3T, DZO-V5T, DZO-V37, DZO-V50, DZO-V58N, DZO-Z33, DZO-Z53, GO-HD, IS-DV, IS-DV2, IS-DV2.4, IS-DV2+, MZ-DV, Pocket DV4100, Pocket DV4100M, Pocket DV4500, Pocket DV5100M, Pocket DV5800, Pocket DV5900, PocketCam 4000, PocketCam X, V5V, Zoom DV
Argus	DC-1620, DC-2250, DC-3185, DC-3270DV, DC-3500, DC-3510, DC-3515, DC-3520, DC-3530, DC-3550, DC-3640, QC-1620, QC-1730, QC-2185, QC-3185, QC-3270DV, QC-5150
BlackBery	6210, 6220, 6230, 6280, 6280, 6280, 6510, 7100, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 8100 Pearl, 8100c, 8300 Curve, 8700c, 8700c, 8700f, 8700g, 8700g, 8700r, 8700t, 8700v, 8700v, 8703e, 8707g, 8707v, 8800, 8800c, 8800r, 8820, 8830
Canon	PowerShot A10, PowerShot A20, PowerShot A30, PowerShot A40, PowerShot A75, PowerShot A80, PowerShot A85, PowerShot A95, PowerShot A100, PowerShot A200, PowerShot A300, PowerShot A310, PowerShot A400, PowerShot A410, PowerShot A420, PowerShot A430, PowerShot A460, PowerShot A470, PowerShot A510, PowerShot A520, PowerShot A530, PowerShot A540, PowerShot A550, PowerShot A560, PowerShot A570 IS, PowerShot A580, PowerShot A590 IS, PowerShot A60,

	PowerShot A610, PowerShot A620, PowerShot A630, PowerShot A640, PowerShot A650 IS, PowerShot A70, PowerShot A700, PowerShot A710 IS, PowerShot A720 IS, PowerShot G3, PowerShot G5, PowerShot G6, PowerShot G7, PowerShot G9, PowerShot Pro 1, PowerShot S1 IS, PowerShot S2 IS, PowerShot S3 IS, PowerShot S5 IS, PowerShot S30, PowerShot S40, PowerShot S45, PowerShot S50, PowerShot S60, PowerShot S70, PowerShot S80, PowerShot S300, PowerShot S330, PowerShot S400, PowerShot S410, PowerShot S500, PowerShot SD10, PowerShot SD20, PowerShot SD30, PowerShot SD40 – Cradle, PowerShot SD100, PowerShot SD110, PowerShot SD200, PowerShot SD300, PowerShot SD330, PowerShot SD400, PowerShot SD430, PowerShot SD450, PowerShot SD500, PowerShot SD550, PowerShot SD600, PowerShot SD630, PowerShot SD700 IS, PowerShot SD750, PowerShot SD800 IS, PowerShot SD850 IS, PowerShot SD870 IS, PowerShot SD900, PowerShot SD950 IS, PowerShot SD1000, PowerShot SD1100 IS, PowerShot SX100 IS, PowerShot TX1, EOS 1D Mark II, EOS 1D Mark II N, EOS 1Ds Mark II, EOS 5D, EOS 10D, EOS 20D, EOS 30D, EOS 40D, EOS 400D, EOS Digital Rebel, EOS Digital Rebel XT, EOS Digital Rebel XTi, Digital IXUS 30, Digital IXUS 40, Digital IXUS 55, Digital IXUS 60, Digital IXUS 65, Digital IXUS 70, Digital IXUS 75, Digital IXUS 80 IS, Digital IXUS 85 IS, Digital IXUS 90 IS, Digital IXUS 300, Digital IXUS 330, Digital IXUS 400, Digital IXUS 430, Digital IXUS 500, Digital IXUS 700, Digital IXUS 750, Digital IXUS 800 IS, Digital IXUS 860 IS, Digital IXUS 900 Ti, Digital IXUS 960 IS, Digital IXUS 970 IS, Digital IXUS i, Digital IXUS i5, Digital IXUS i7 – Cradle, Digital IXUS I Zoom, Digital IXUS II, Digital IXUS IIs, Digital IXUS Wireless, DC10, DC20, DC22, DC40, DC50, DC220, DC230, Elura 40MC, Elura 50, Elura 60, Elura 65, Elura 70, Elura 80, Elura 85, Elura 90, Elura 100, GL2, Optura 10, Optura 20, Optura 30, Optura 40, Optura 50, Optura 60, Optura 200MC, Optura 300, Optura 400, Optura 500, Optura 600, Optura S1, Optura Xi, VIXIA HR10, VIXIA HV10, VIXIA HV20, XL1, XL1S, ZR45MC, ZR50MC, ZR65MC, ZR70MC, ZR85, ZR90, ZR200, ZR300, ZR400, ZR600, ZR700, ZR830, ZR850
Casio	QV-20, QV-4000X , QV-4000, QV5000SX, QV-5700, QV-R3, QV-R4, QV-R40, QV-R41, QV-R51, QV-R62, GV-10, GV-20, EX-Z1000 - Cradle
Chronos	SP-3110, SP-5110
Concord	Eye-Q Duo 2000, Eye-Q Duo LCD, Eye-Q Go LCD, Eye-Q Go 2000, Eye-Q Mini, Eye-Q 1000, Eye-Q 2040, Eye-Q 2133Z, Eye-Q 3040AF, Eye-Q 3042AF, Eye-Q 3043, Eye-Q 3045, Eye-Q 3047, Eye-Q 3103, Eye-Q 3120AF, Eye-Q 3132Z, Eye-Q 3340Z , Eye-Q 3341Z, Eye-Q 3345Z, Eye-Q 3346Z, Eye-Q 3X, Eye-Q 4060 AF, Eye-Q 4340Z, Eye-Q 4360Z , Eye-Q 4363Z , Eye-Q 5062AF, Eye-Q 5330Z, Eye-Q 5345Z, DV2020
Contax	Contax TVS Digital, Contax SL300RT
Cool-iCam	Aqua 2100
Cowon	A2, iAudio G2, iAudio G3, iAudio M3 - Cradle, iAudio U2, iAudio X5L, iAudio X5 - Cradle,
Creative	3200Z, Jukebox 2, Jukebox 2LX, Jukebox 3, Jukebox Zen, Jukebox Zen 2.0, Jukebox Zen NX, Jukebox Zen Xtra, MuVo2, MuVo2 X-Trainer, NOMAD Jukebox 2, NOMAD MuVo2, NOMAD Zen Xtra, NOMAD ZenNX
DXG	305V, DXG-202V, DXG-301V, DXG-305V, DXG-505V, DXG-506V, DXG-521
Epson	L500V
Fuji	Fuji Axia IX-100, Fuji Axia Slimshot, Fuji FinePix A120, Fuji FinePix A345, Fuji FinePix A350, Fuji FinePix A400, Fuji FinePix A500, Fuji FinePix A600, Fuji FinePix A605, Fuji FinePix A610, Fuji FinePix A700, Fuji FinePix A800, Fuji FinePix A820, Fuji FinePix A900, Fuji FinePix A920, Fuji FinePix E900, Fuji FinePix Q1 Digital, Fuji FinePix S20PRO, Fuji Finepix S3 Pro, Fuji Finepix S3 Pro UVIR, Fuji FinePix S5 Pro, Fuji FinePix S5000, Fuji FinePix S5100, Fuji FinePix S5200, Fuji FinePix S5500, Fuji Finepix S5600, Fuji FinePix

	S6000fd, Fuji FinePix S7000, Fuji FinePix S9100, Fuji Finepix S9500, Fuji Finepix S9600, Fuji FinePix Z1 – Cradle, Fuji FinePix Z2 – Cradle, Fuji FinePix Z3 - Cradle
Gateway	DC-M40, DC-M42, DC-M50, DC-T20, DC-T23, DV-S20
Hitachi	DZMV200A, DZMV230A, DZMV270A, DZMV350A, DZMV380A
HP	PhotoSmart 120, PhotoSmart 120CSE, PhotoSmart 120v, PhotoSmart 120xi, PhotoSmart 318, PhotoSmart 318SE, PhotoSmart 318xi, PhotoSmart 320, PhotoSmart 320xi, PhotoSmart 433, PhotoSmart 435, PhotoSmart 435v, PhotoSmart 435xi, PhotoSmart 612, PhotoSmart 612Cxi, PhotoSmart 612xi, PhotoSmart 620, PhotoSmart 620v, PhotoSmart 620xi, PhotoSmart 635, PhotoSmart 635v, PhotoSmart 635xi, PhotoSmart 715, PhotoSmart 715Cxi, PhotoSmart 715xi, PhotoSmart 720, PhotoSmart 720v, PhotoSmart 720xi, PhotoSmart 733, PhotoSmart 735, PhotoSmart 735v, PhotoSmart 735xi, PhotoSmart 850, PhotoSmart 850xi, PhotoSmart 8881 CameraDock, PhotoSmart 8886 CameraDock, PhotoSmart 912, PhotoSmart 912v, PhotoSmart 912xi, PhotoSmart 935, PhotoSmart 935v, PhotoSmart 935xi, PhotoSmart 945, PhotoSmart 945xi, PhotoSmart E217, PhotoSmart E317, PhotoSmart E327, PhotoSmart E327, PhotoSmart M22, PhotoSmart M23, PhotoSmart M305, PhotoSmart M305v, PhotoSmart M307, PhotoSmart M307v, PhotoSmart M307xi, PhotoSmart M407, PhotoSmart M407v, PhotoSmart M415, PhotoSmart M437, PhotoSmart M440, PhotoSmart M447, PhotoSmart M447v, PhotoSmart M525, PhotoSmart M537, PhotoSmart M540, PhotoSmart M630, PhotoSmart R607, PhotoSmart R707, PhotoSmart R707v, PhotoSmart R707xi, PhotoSmart R717, PhotoSmart R725, PhotoSmart R725v, PhotoSmart R725xi, PhotoSmart R727, PhotoSmart R742, PhotoSmart R742v, PhotoSmart R817 – Cradle, PhotoSmart R818, PhotoSmart R837
HTC	2125, 8125, 8525, Dash s620, MDA Smartphone, Mogul PPC-6800, P3450, S710 Vox, SDA Smartphone, Wing, X5700, XV6700 Smartphone
iRiver	H100, H120, H140, H300, H320, H340, iFP-340, iFP-380, iFP-390, iFP-395, iFP-780, iFP-790, iFP-795, iFP-799, iFP-880, iFP-890, iFP-895, iFP-899, iFP-990, iFP-995, iFP-999, iFP-1090, iFP-1095, iGP-100, N10, PMC-120, PMP-120, PMP-140, T10, T30
JVC	GR-D70US, GR-D71US, GR-D72US, GR-D73US, GR-D74US, GR-D90, GR-D90US, GR-D91US, GR-D93US, GR-D94US, GR-D201US, GR-D230US, GR-D270US, GR-D271US, GR-D275US, GR-D290US, GR-D295US, GR-D370US, GR-D371US, GR-D372US, GR-D375US, GR-D390US, GR-D395US, GR-D396US, GR-D650US, GR-D770, GR-D796, GR-DF430US, GR-DF450US, GR-DF470US, GR-DF550US, GR-DV500US, GR-DV800US, GR-DV801US, GR-DVL510U, GR-DVL512U, GR-DVL520U, GR-DVL522U, R-DVL720U, GR-DVL725U, GR-DVL815U, GR-DVL817U, GR-DVL820U, GR-DVL822U, GR-DVL915U, GR-DVL920U, GR-DVM76U, GR-DVM96U, GR-DX75US, GR-DX77US, GR-DX95US, GR-DX97US, GR-DX300US, GR-DX307US, GR-DZ7US, GR-HD1US, GR-X5US, GZ-MC100US, GZ-MC200US, GZ-MC500US, GZ-MG20US, GZ-MG21US, GZ-MG27US, GZ-MG30US, GZ-MG31US, GZ-MG35US, GZ-MG37US, GZ-MG40US, GZ-MG505US, GZ-MG50US, GZ-MG57US, GZ-MG67US, GZ-MG70US, GZ-MG77US
Kodak	Camera Dock Série 3, Picture Viewer, Digital Frame EX-1011, Digital Frame EX-811, Digital Frame S-510, Digital Frame SV-1011, Digital Frame SV-710, Digital Frame SV-811, Photo Printer 300, Photo Printer 500, Printer Dock Plus Série 3, Printer Dock Série 3
Konica-Minolta	DiMAGE E223, DiMAGE G400, DiMAGE G530
Motorola	C331g, C332, c650, ic402, ic502, KRZR K1, KRZR K1m, L2, maxxVe, PEBL U6, Q, RAZR, RIZR Z3, ROKR Z6, SLVR L6, SLVR L7, SLVR L7c, V3, V3a, V3c, V3i, V3m, V3r, V3t, V3x, V3xx, V6, V8, V180, V188, V190, V195, V220, V235, W315, W317, V323, V323i, V325, v325i, V360, V361, V365,

	W385
Nikon	CoolPix 2000, D2H, D2Hs, D2X, D2Xs, D3, D40, D40X, D50, D70, D70s, D80, D100, D200, D300
Nokia	3109, 3110, 5200, 5300, 6110, 6120, 6290, 6300, 7390, E90, N76, N91, N95, N-Gage
Olympus	µ-10, µ-15, µ-20, µ-25, µ-30, µ-300, µ-400, µ-410, C-2 Zoom, C-50 Zoom, C-60 Zoom, C-150, C-150 Zoom, C-160 Zoom, C-220 Zoom, C-300 Zoom, C-350 Zoom, C-380, C-380 Zoom, C-390, C-450 Zoom, C-450 Zoom del Sol, C-460 Zoom, C-520 Zoom, C-550 Zoom, C-720 Ultra Zoom, C-725 Ultra Zoom, C-730 Ultra Zoom, C-740 Ultra Zoom, C-750 UItra Zoom, C-755 UItra Zoom, C-760 Ultra Zoom, C-765 Ultra Zoom, C-770 Ultra Zoom, C-4000 Zoom, C-4100, C-4100 Zoom, C-5000 Zoom, C-5050 Zoom, C-5060 Wide Zoom, C-7070 Wide Zoom, C-8080 Wide Zoom, D-380, D-390, D-395, D-520 Zoom, D-535 Zoom, D-540 Zoom, D-550 Zoom, D-555 Zoom, D-560 Zoom, D-565 Zoom, D-575 Zoom, D-580 Zoom, D-590 Zoom, E-1, E-3, Evolt E-300, FE-100, FE-110, FE-115, FE-170, FE-210, FE-270, IR-300, IR-500, Stylus 300 Digital, Stylus 400 Digital, Stylus 410 Digital, X-1, X-2, X-200, X-250, X-300, X-400, Ferrari camera dock
Opus	Opus 4000
Panasonic	Lumix DMC-FZ1, Lumix DMC-FZ10, Lumix DMC-FZ10K, Lumix DMC-L1, Lumix DMC-L33, Lumix DMC-LC1, Lumix DMC-LC5, Lumix DMC-LC33, Lumix DMC-LC40, Lumix DMC-LC43, PV-DV203, PV-GS50, PV-GS70, PV-GS80, PV-GS85, PV-GS180, PV-GS300, PV-GS500, SDR-H18, SDR-H20, SDR-H200, SDR-S100, SV-AV25, SV-AV100, VDR-D100, VDR-D200, VDR-D300, VDR-D105, VDR-D230, VDR-D250, VDR-D310, NV-GS75
Pentax	Optio 30, Optio 330RS, Optio 430RS
Polaroid	a500, a520, a550, iON 230, PDC-2150, PDC-2300z, PDC-2350, PDC-3350, PDC-4350, PDC-4370
RCA	Lyra A/V Jukebox RD2780, Lyra Jukebox RD2800, Lyra Jukebox RD2820, Lyra Jukebox RD2821, Lyra Jukebox RD2840, Lyra Mini-Jukebox RD2760, Lyra RD1020, Lyra RD1021, Lyra RD1070, Lyra RD1071, Lyra RD1080, Lyra Wireless R
RIO	Série: Cali, Carbon, Chiba, Eigen, Forge, Karma, Nitrus
Samsung	Digimax 300, Digimax 301, Digimax 330, Digimax 340, Digimax 360, Digimax 401, Digimax 410, Digimax 420, Digimax 530, Digimax 800K, Digimax U-CA 401, Digimax V3, Digimax V40, SC-D23, SC-D24, SC-D27, SC-D29, SC-D33, SC-D34, SC-D39, SC-D86, SC-D103, SC-D107, SC-D180, SC-D303, SC-D353, SC-D362, SC-D363, SC-D364, SC-D365, SC-D366, SC-D453, SC-D590, SC-D903, SC-D963, SC-D965, SC-D5000, SC-D6040, SC-D6550, SC-DC163, SC-DC164, SC-DC165, SC-DC563, SC-DC564, SC-DC565, SC-L700, SC-L770, SC-L870, SC-L901, SC-L907, SC-MM10S, SC-X105L – Cradle, SC-X205L, SC-X210L, SC-X220L MP3: YP-35, YP-55V, YP-MT6V, YP-MT6X, YP-MT6Z, YP-ST5, YP-T7JX, YP-T7JZ, YP-T7X, YP-T7Z
Sharp	VL-Z3U, VL-Z7U
Sony	CCD-TRV608, DPP-EX50, DPP-FP30, DPP-FP50, DSC-F707, DSC-F717, DSC-F77, DSC-F828, DSC-F88, DSC-FX77, DSC-G1, DSC-H1, DSC-H2, DSC-H5, DSC-L1, DSC-M2 – Cradle, DSC-P1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P8, DSC-P9, DSC-P10, DSC-P20, DSC-P30, DSC-P31, DSC-P32, DSC-P41, DSC-P50, DSC-P51, DSC-P52, DSC-P71, DSC-P72, DSC-P73, DSC-P92, DSC-P93, DSC-P93A, DSC-R1, DSC-S40, DSC-S75, DSC-S85, DSC-S500, DSC-S600, DCR-SR300C, DSC-U10, DSC-U20, DSC-U30, DSC-U40, DSC-U40/B, DSC-U40/R, DSC-U50, DSC-U60, DSC-V1, DSC-V3, DSC-W1, DSC-W1/B, DSC-W5, DSC-W7, DSC-W30, DSC-W35, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500, MVC-FD92, MVC-FD97, MVC-FD100, MVC-FD200

	<p>Digitální Camcordery: DCR-DVD7E, DCR-DVD100, DCR-DVD100E, DCR-DVD101, DCR-DVD101E, DCR-DVD200, DCR-DVD200E, DCR-DVD201, DCR-DVD201E, DCR-DVD203E, DCR-DVD300, DCR-DVD505E, DCR-HC14E, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC22E, DCR-HC30, DCR-HC30E, DCR-HC32E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC42E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC90E, DCR-HC1000, DCR-IP1, DCR-IP1E, DCR-IP7BT, DCR-IP7E, DCR-IP55, DCR-IP55E, DCR-IP220, DCR-IP220E, DCR-PC9, DCR-PC53E, DCR-PC55E, DCR-PC100E, DCR-PC101, DCR-PC101E, DCR-PC103E, DCR-PC105, DCR-PC105E, DCR-PC106E, DCR-PC107E, DCR-PC109, DCR-PC109E, DCR-PC110, DCR-PC115, DCR-PC120BT, DCR-PC120E, DCR-PC330, DCR-PC330E, DCR-PC350, DCR-PC350E, DCR-TRV14E, DCR-TRV17, DCR-TRV18, DCR-TRV19, DCR-TRV19E, DCR-TRV22, DCR-TRV22E, DCR-TRV25, DCR-TRV27, DCR-TRV30, DCR-TRV33, DCR-TRV38, DCR-TRV39, DCR-TRV40E, DCR-TRV50, DCR-TRV50E, DCR-TRV60E, DCR-TRV70, DCR-TRV80, DCR-TRV80E, DCR-TRV140, DCR-TRV240, DCR-TRV245E, DCR-TRV250, DCR-TRV250E, DCR-TRV25E, DCR-TRV260, DCR-TRV265E, DCR-TRV270E, DCR-TRV285E, DCR-TRV330, DCR-TRV33E, DCR-TRV340, DCR-TRV340E, DCR-TRV350, DCR-TRV355E, DCR-TRV360, DCR-TRV460, DCR-TRV460E, DCR-TRV480E, DCR-TRV530, DCR-TRV730, DCR-TRV740, DCR-TRV740E, DCR-TRV830, DCR-TRV840, DCR-TRV950, HDR-HC1E MP3 přehrávače:- MZ-N420D, MZ-NE410, MZ-N505Gold, MZ-N707Black, MZ-N707Blue, MZ-NF520D, MZ-NH600D, MZ-S1, MZ-S2, MZ-Sports</p>
Toshiba	PDR-M500, PDR-M700
Vivitar	ViviCam 25, ViviCam 30, ViviCam 35, ViviCam 55, ViviCam 60, ViviCam 3301, ViviCam 3315, ViviCam 3325, ViviCam 3340, ViviCam 3345, ViviCam 3350, ViviCam 3350B, ViviCam 3350S, ViviCam 3555, ViviCam 3555T, ViviCam 3610, ViviCam 3625, ViviCam 3630, ViviCam 3632, ViviCam 3640, ViviCam 3650, ViviCam 3675, ViviCam 3705, ViviCam 3710, ViviCam 3715, ViviCam 3730, ViviCam 3735, ViviCam 3740, ViviCam 3746, ViviCam 3750, ViviCam 3755, ViviCam 3765, ViviCam 3805, ViviCam 3825, ViviCam 3826, ViviCam 3935, ViviCam 5100, ViviCam 6150S DVR-200, DVR-310, DVR-390H, DVR-510